
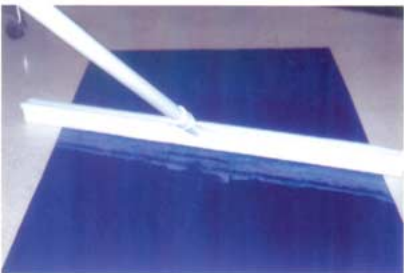


CLEANTACK

CLEANING INSTRUCTIONS

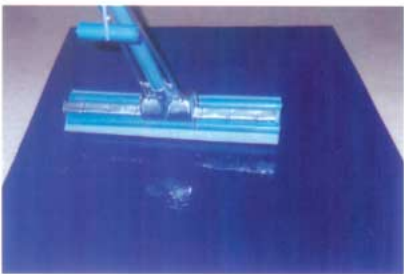

MATERIALS:

- **GREEN CLEAN** or **CLEAR CLEAN**
- Mop - sponge/cloth
- Squeegee (optional)
- Applicator bottle (developed specifically to evenly and efficiently apply cleaners)

METHOD:

- Mix cleaning solution in applicator bottle at a 1:4 ratio (cleaner to water).
- Apply an even amount of cleaner over **CLEANTACK**, wetting, but not creating pools or puddles.
- Mop off in a direction toward entry (away from clean area). Use short, firm, even strokes, systematically moving across **CLEANTACK**. Extra attention may be needed for high traffic and high contamination areas.
- Thoroughly rinse and ring mop out with warm water. Mop over **CLEANTACK** to remove any surplus cleaner with the damp mop. Do so also around **CLEANTACK** if floor is exposed.
- Let air dry. Squeegee off, when necessary for quicker drying.

- **GREEN CLEAN** is for normal use and daily cleaning.
- **CLEAR CLEAN** is for high traffic and high contamination applications as well as monthly cleaning.
- **DO NOT USE:** cleaning machines, heavy, rough scouring powder, waxes or heavy solvent based cleaners.
- If you have questions on optional or replacement cleaners . . . **call us, we'll answer them.**
- **WARNING, MATS ARE SLIPPERY WHEN WET.**

