




The Ergo F Series is designed to provide ergonomic support for employees working in a laboratory setting. The modularity of the chair makes it suitable for both seated and counter height workstations. Featuring dual density foam and a contoured backrest available in two sizes makes the Ergo F Series ideal for a variety of users working in laboratory and cleanroom environments.

The Ergo F can also be specified to meet clean room standards, meeting the cleanliness specifications for:


- Federal Standard 209E, Class 1, 10, 100 & 1000 environments.
- ISO 14644-1 Class 3, 4, 5 & 6 environments.

**Adjustment Options:**

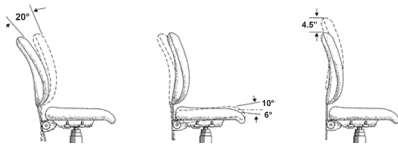

**Standard Control**

- 30° back angle adjustment
- 4.5" back height adjustment
- 30° back pivot

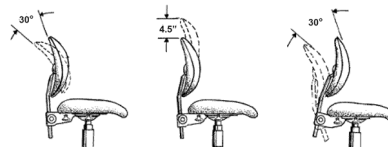

**3 Lever Tilt Control (Bar)**

- Back height adjustment
- 20° back angle adjustment
- 6-10° seat tilt
- Pneumatic height adjustment



**Apt Control**

- Back pivot
- Pneumatic height adjustment

**Seat Options:**



**Standard: 17" W x 18.5" H**  
**Extra Small: 17.5" x 15.5"**  
**Large: 20" x 19"**

**Memory Foam Seat**  
**Triple Density Foam Seat**

**Armrest Options:**



**T-Arms**

- Polyurethane arm pad 4" W x 10.5" L
- Solid 1/4" thick spring steel frame, epoxy powder coated black

- Arm height from seat pan 7.5"
- Optional black Nyvek upholstered arm pad



**3 Inch Adjustable T-Arm**

- Finger tip adjustment
- Polyurethane arm pad 3" W x 10.5" L
- Solid 1/4" thick spring steel frame, epoxy powder coated black

- Arm height adjustable from seat pan 6" - 10"
- Arms width adjustable 2" per arm
- Optional black Nyvek upholstered arm pad

**Pneumatic Lift Options:**



80mm, 13.75"-16.75"  
 100mm, 14"-17.5"  
 125mm, 25.5"-19.5"  
 157mm, 16.25"-22.25"

**Base Options:**



Nylon Reinforced Base

**Footring Options:**



Footring

PAC Midwest  
 Minneapolis, MN  
 (888) 903-0333

PAC South  
 Dallas, TX  
 (800) 442-4008


PAC West  
 Los Angeles, CA  
 (888) 839-3936

PAC Mexico  
 Tecate, Mexico  
 (619) 573-4501

**Caster Options:**



**2" Nylon Dual Wheel Caster**  
 Designed for use on carpet.

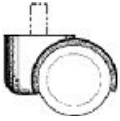

**2" Urethane Dual Wheel Caster**  
 Designed for use on hard floor, tile, concrete & marble floors.



**2.5" Single Wheel Caster**  
 Designed for use on heavy carpet.



**2.5" Single Wheel Urethane Caster**  
 Designed for use on rough floor surfaces.



**3" Single Wheel Urethane Casters**  
 Designed for use on rough floor surfaces.  
 Adds 2.5" to seat height.



**2.25" Lock On Urethane Double Wheel Braking Casters**  
 Provides the stability of glide and mobility of a caster. When the user's weight is on the chair, the wheels lock. With no weight on the chair, the caster unlocks and moves freely.



**2.25" Lock Off Urethane Double Wheel Braking Casters**  
 Ideal for use on tile floors. When the user's weight is off the chair, a brake is applied to prevent the chair from rolling away.



**1.25" Glides (Standard)**  
 Provides stability for use on commercial carpet floors.



**2.25" Glides**  
 Provides stability for use on commercial carpet floors.