




**8141**

**Flush Precision Cut Diagonal  
Cutter with Oval Head & ESD Safe  
Handle 0.1-1.25 mm**







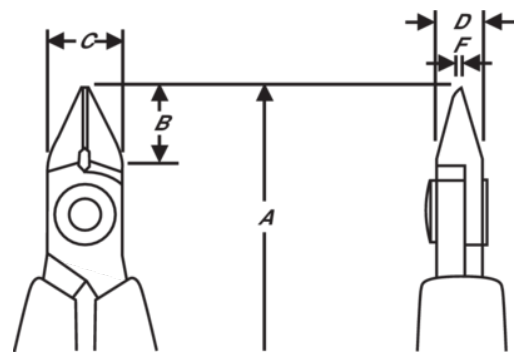



## PRODUCT DETAILS

- Ideal for wire harness work and standard printed circuit board assembly
- High performance alloy steel
- Exacting induction hardened cutting edges 63–65 HRC
- ESD safe mono material handles in synthetic material with leaf springs
- Precision screw joint that minimizes friction and maximizes alignment of cutting edges
- Cutting capacity is listed for solid copper wire
- Phosphated finish



PRODUCT ATTRIBUTES

Product: **8141**

	Oval		S		Flush
	0.1-1.25 mm		0.00-0.05 in		0.2-0.5 mm
	0.01-0.02 in	<b>A</b>	110 mm	<b>A</b>	4.33 in
<b>B</b>	10,5 mm	<b>B</b>	0,41 in	<b>C</b>	10 mm
<b>C</b>	0.39 in	<b>D</b>	6 mm	<b>D</b>	0,24 inch
<b>F</b>	0,8 mm	<b>F</b>	0,03 in		70 g
<b>Ω</b>	Dissipative				